pmvmounts.co.uk

Mounting instructions for universal super slim 'tilting' TV wall bracket
VESA 100 / 200 / 300 / 400 - Universal up to 600mm X 400mm
32" to 42" (81cm to 107cm) - Up to 40Kgs

Model No.	Factory No.
PMVMOUNTFB1T	**Z3242T**

Read these instructions carefully before installing your equipment.
Install the wall bracket in a suitable location using fixings which are appropriate for the wall material and structure. Consult a qualified builder if you're in any doubt as to the structural integrity of the wall.
Do not attempt to alter or modify any part of the wall mount or its attachments.
Do not use if any parts are broken or appear to be damaged.
Tighten all bolts and fixings securely. Only use fixings provided with this bracket.
Do not mount your TV close to sources or heat or moisture.
Always have a minimum of two persons to install the wall bracket and TV.

TV Fixing Kit

A - M4 x 20mm
B - M5 x 20mm
C - M6 x 20mm
D - M8 x 20mm
x4

E - M4 Washer
F - M5 Washer
G - M6 Washer
H - M8 Washer
x4

I - M5 Spacer
J - M6 Spacer
K - M8 Spacer
x4

Also required



1 Mount Bracket To Wall

NOTE:
For ease of installation mount bracket on wall using position 1 and mark other positions using a spirit level. Then remove fixing from position 1, remove bracket and drill other positions
Use Fixings suitable for your type of wall construction.
Use All available fixing points
If in any doubt of the suitability of the wall, it's construction or what type of fixings to use, consult a qualified builder or installer.

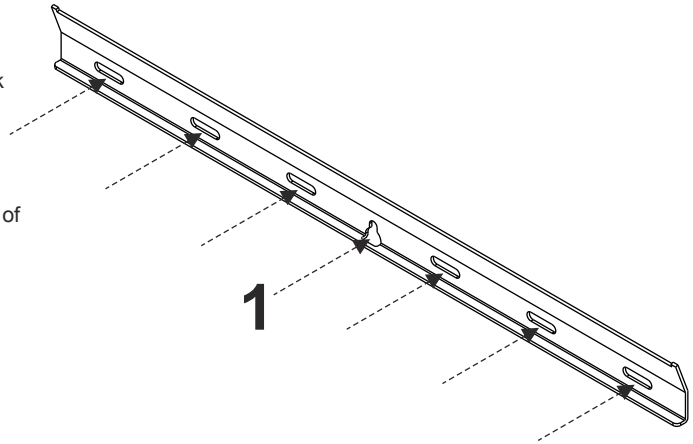

2 Attach Screen Fixing Arm To Screen

NOTE: To access fixing points it may be necessary to remove the tilt locking arm from the TV fixing rail. First remove vertical lock screw 'a', then remove tilt lock screw 'b'. ONLY REMOVE TV LOCK SCREW, DO NOT REMOVE THE BOLT AND NUT FROM THE HANGING SIDE.

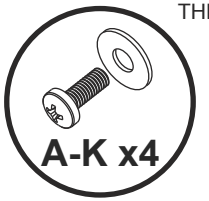

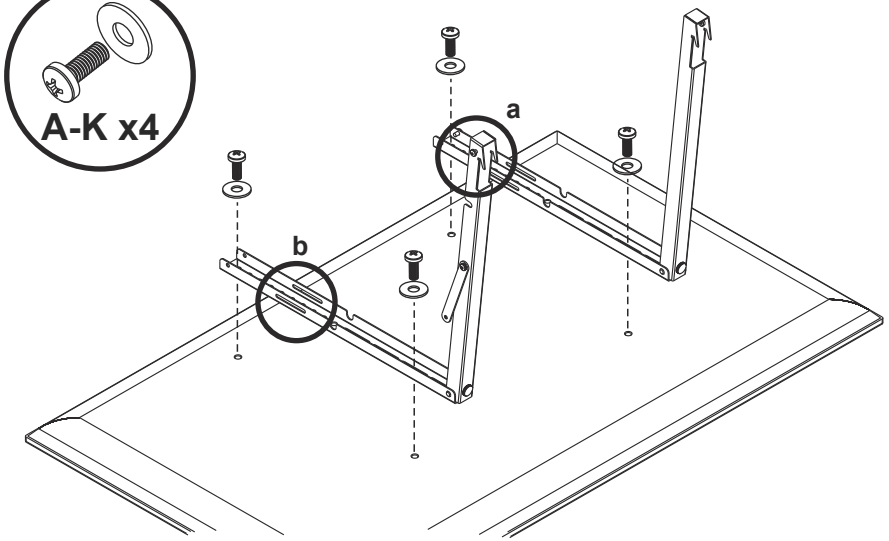

3 Hang Screen On Wall Plate

NOTE:
Hang TV centrally to wall plate.

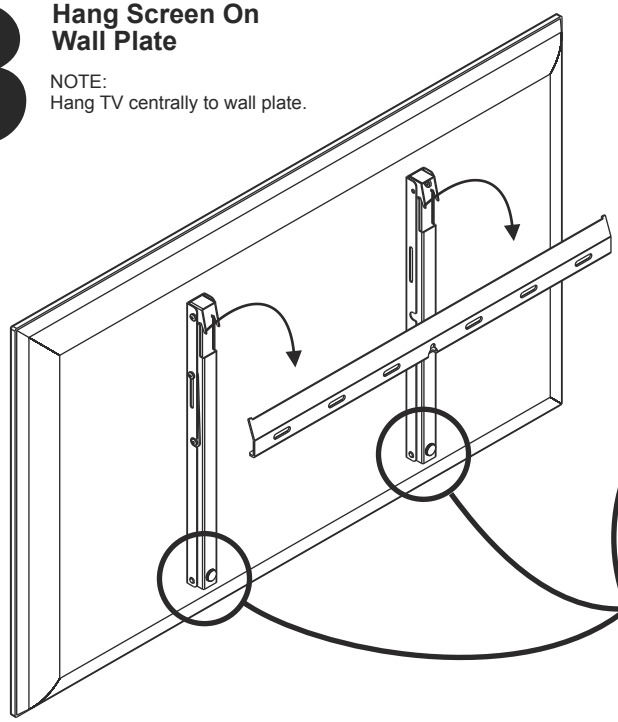

4 Adjust Level and Tilt

NOTE:
To adjust tilt, firstly remove bolt from position 'b' if you haven't already done so. Loosen bolt 'a' and tilt TV to desired angle. Re-tighten bolt 'a' to secure position. DO NOT LOOSEN OR REMOVE BOLT 'C'!

NOTE:
To adjust level on wall, turn thumb wheels on TV hanging arms clockwise or anticlockwise to move the resting point in or out.